

Operating Instructions

CD/VIDEO CD/LD PLAYER

 
CLD-V880

NTSC



LaserDisc
LaserKaraoke

GRAPHICS

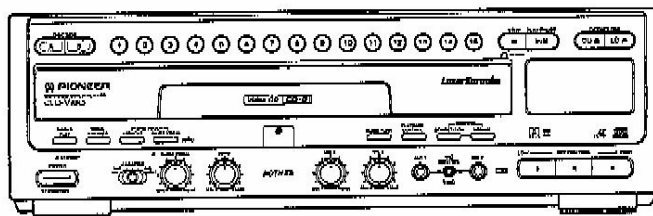

- This player is not suitable for commercial use.

Thank you for buying this Pioneer product. Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.

In some countries or regions, the shape of the power plug and power outlet may sometimes differ from that shown in the explanatory drawings. However, the method of connecting and operating the unit is the same.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT NOTICE

The serial number for this equipment is located on the rear panel. Please write this serial number on your enclosed warranty card and keep it in a secure area. This is for your security.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

ATTENTION: POUR PREVENIR LES CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

CONTENTS

BEFORE OPERATING THE PLAYER

ACCESSORIES	4
REMOTE CONTROL OPERATIONS	4
PRECAUTIONS	5
TYPES OF DISCS THAT CAN BE PLAYED WITH THIS UNIT	6
CARE OF DISCS	7
CONNECTIONS	8
NAMES AND FUNCTIONS	10

BASIC OPERATION


TO PLAY AN LD, CDV OR CD	12
--------------------------------	----

VARIOUS OPERATIONS

CONVENIENT FUNCTIONS FOR KARAOKE	14
PLAYBACK OF VIDEO CD	19
CONVENIENT FUNCTIONS FOR PLAYING AN LD, VIDEO CD, CDV OR CD	21
TO SEARCH FOR A PARTICULAR TIME/FRAME	22
TO PLAY AN LD/CD GRAPHICS	23
TO PLAY ONLY DESIRED SCENES/TRACKS	25
TO REPEATEDLY PLAY A DESIRED PASSAGE	26
DISPLAY SWITCHING	27
TROUBLESHOOTING	28
SPECIFICATIONS	32

PIONEER®
The Art of Entertainment

 CONNECTIONS

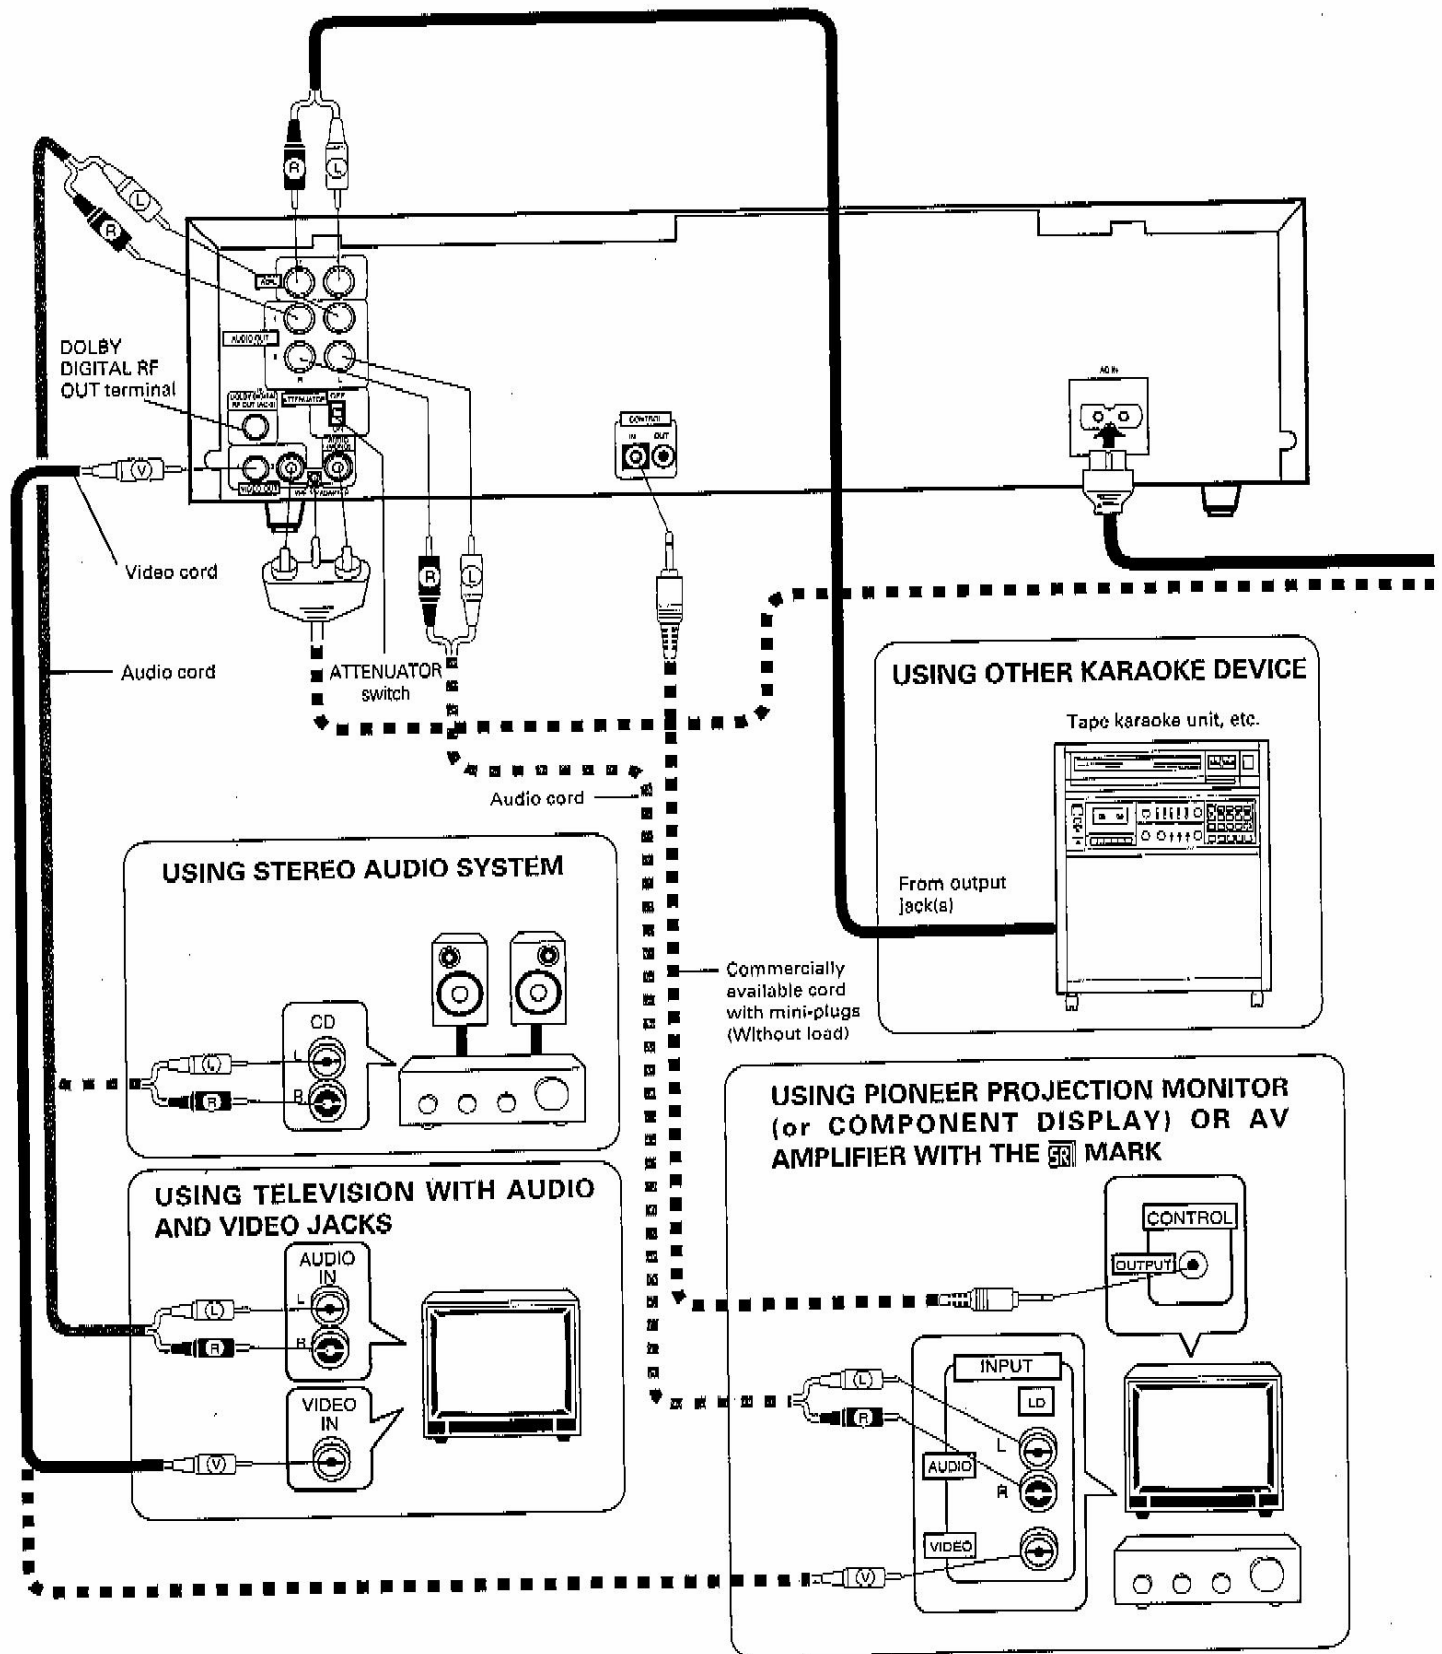


Finally plug the accessory power cord to the AC IN jack and a household power outlet (which should permanently be supplied with power.)



Never use a power cord other than the accessory power cord, as otherwise trouble may be caused.

 USING TELEVISION WITHOUT AUDIO AND VIDEO JACKS

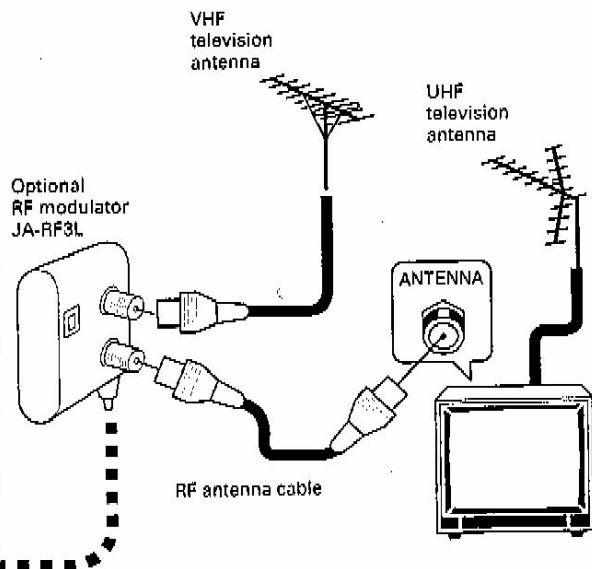

1. Detach the VHF antenna cable from the VHF antenna terminal of your TV set, and connect the cable to the VHF IN terminal of the RF modulator.
2. Connect the VHF OUT terminal of the RF modulator to the VHF antenna terminal of your TV set.
3. Connect the socket (3-pin) of the RF modulator to the VHF ADAPTER jacks.

NOTE:

Push the plug in firmly. If the plug is not properly inserted, it may result in snow or noise on the screen.

When the sound from a LaserDisc or Compact Disc is output through a television speaker it becomes monaural sound (This is the same for a stereo television).

NOTES:

- Stripe patterns may appear when a LaserDisc is played on a television. Move the antenna cable away from the power cord to avoid this.
- Be sure to turn off the power of this player when you watch a TV broadcast.

CONNECTING TV AND STEREO AMPLIFIER

- Connect the VIDEO OUT jack of the player to the video input jack of the monitor television.
- Connect the AUDIO OUT jacks to the stereo amplifier AUX, CD, LD, VDP or other jacks, except the PHONO input jacks. The television speakers can also be used by connecting the television audio input jacks and the player AUDIO OUT jacks. However, connection to a stereo amplifier is recommended to obtain superior audio playback quality for Compact Discs and LaserDiscs. Do not change the television antenna and VCR connections.

THE MARK

System control can be performed when the player is combined with an optional AV amplifier, which can provide centralized control of Pioneer products with the  mark.

Connect the VIDEO OUT jack of the player to the video disc video input jack of the AV amplifier and connect the AUDIO OUT jacks of the player to the audio input jacks of the AV amplifier.

Connect the CONTROL IN jack of the player to the CONTROL OUT jack of the AV amplifier using a commercially available cord with mini-plugs. (without load)

- For details concerning the connection and operation methods, please refer to the operating instructions for the AV amplifier.

ATTENUATOR SWITCH

When the television speakers are used, the sound may be distorted. In this case, set the ATTENUATOR switch to ON to reduce the distortion.

DOLBY DIGITAL RF OUT (AC-3) jack

This output jack is compatible with the AC-3 (digital multi-audio format). Dolby digital (AC-3) compatible LD software can be played by connecting this jack to an amplifier or surround processor equipped with the AC-3 RF input jack.

- The Dolby digital (AC-3) effect cannot be obtained with LD software or AV amplifiers that are not Dolby digital (AC-3) compatible.
- Do not connect this jack to an audio input jack of an ordinary stereo amplifier or AV amplifier.